



SPARE PARTS DIAGRAM FOR



**/// BRAVILOR
BONAMAT**

Coffee Machine
Esprecious 12




First Choice Group
Blakeney Way, Kingswood Lakeside
Cannock, Staffs, WS11 8LD
TEL: 01543 577778 FAX: 01543504141
Email: enquires@firstchoice-cs.co.uk
Web: www.firstchoice-cs.co.uk


BOM ID	Description	S-RS	English
H-01	6.331.050.001	S	Suspension bracket
H-02	6.000.331.011	RS	Espresso brewer
H-03	6.000.331.023	S	Brewer service set

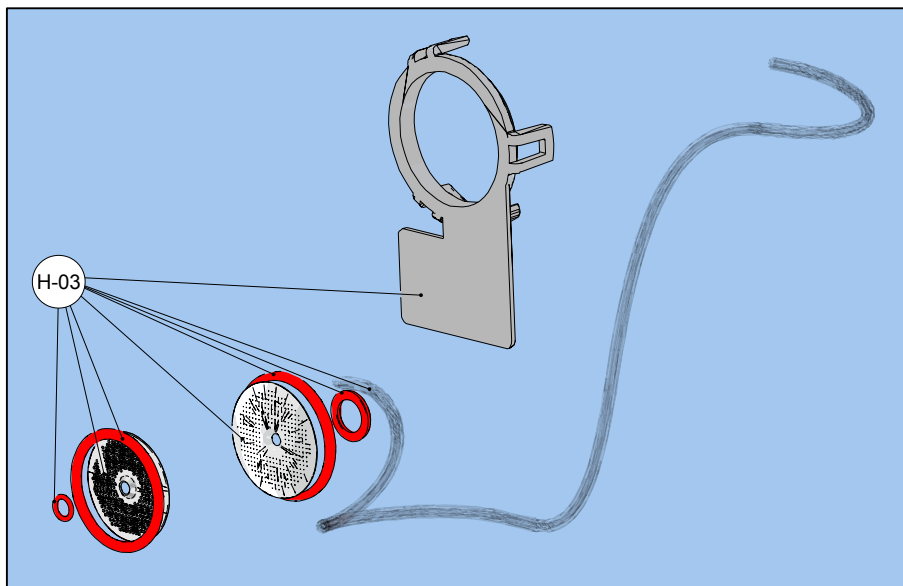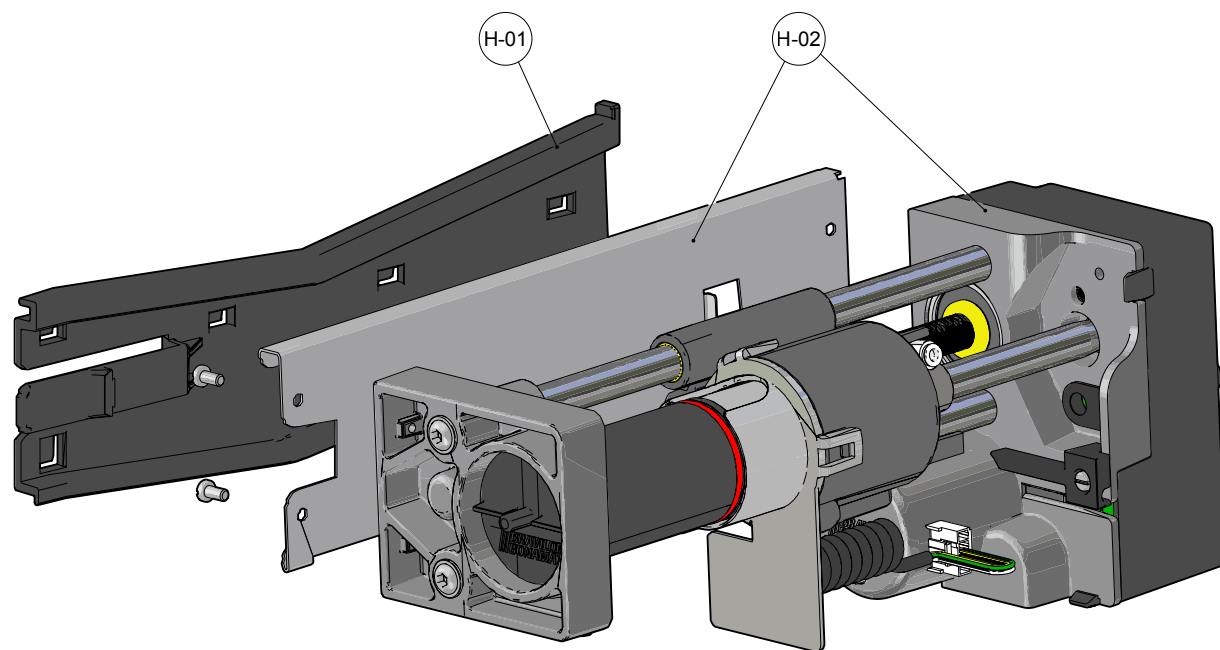


BOM ID	Description	S-RS	English
H1-01	6.001.093.016	DT	Safety ring 35mm
H1-02	6.331.082.001	DT	Spindel stopper
H1-03	6.018.021.001	DT	Ball Bearing D35xD15x11
H1-04	6.017.003.013	S	Magnet D15x6x6
H1-05	6.001.093.018	DT	Safety ring 15mm
H1-06	6.331.084.000	RS	Motor brewer (complete)
H1-07	6.331.067.001	DT	Gear Z48
H1-08	6.017.008.001	S	Belt 9mm
H1-09	6.331.127.001	DT	Cover print
H1-10	6.331.074.001	DT	Frame rear side
H1-11	6.331.155.001	DT	Tube support
H1-12	6.331.153.001	DT	Drop catcher
H1-13	6.331.083.001	DT	Gear Z12
H1-14	6.001.101.004	DT	Adjusting screw M3x6

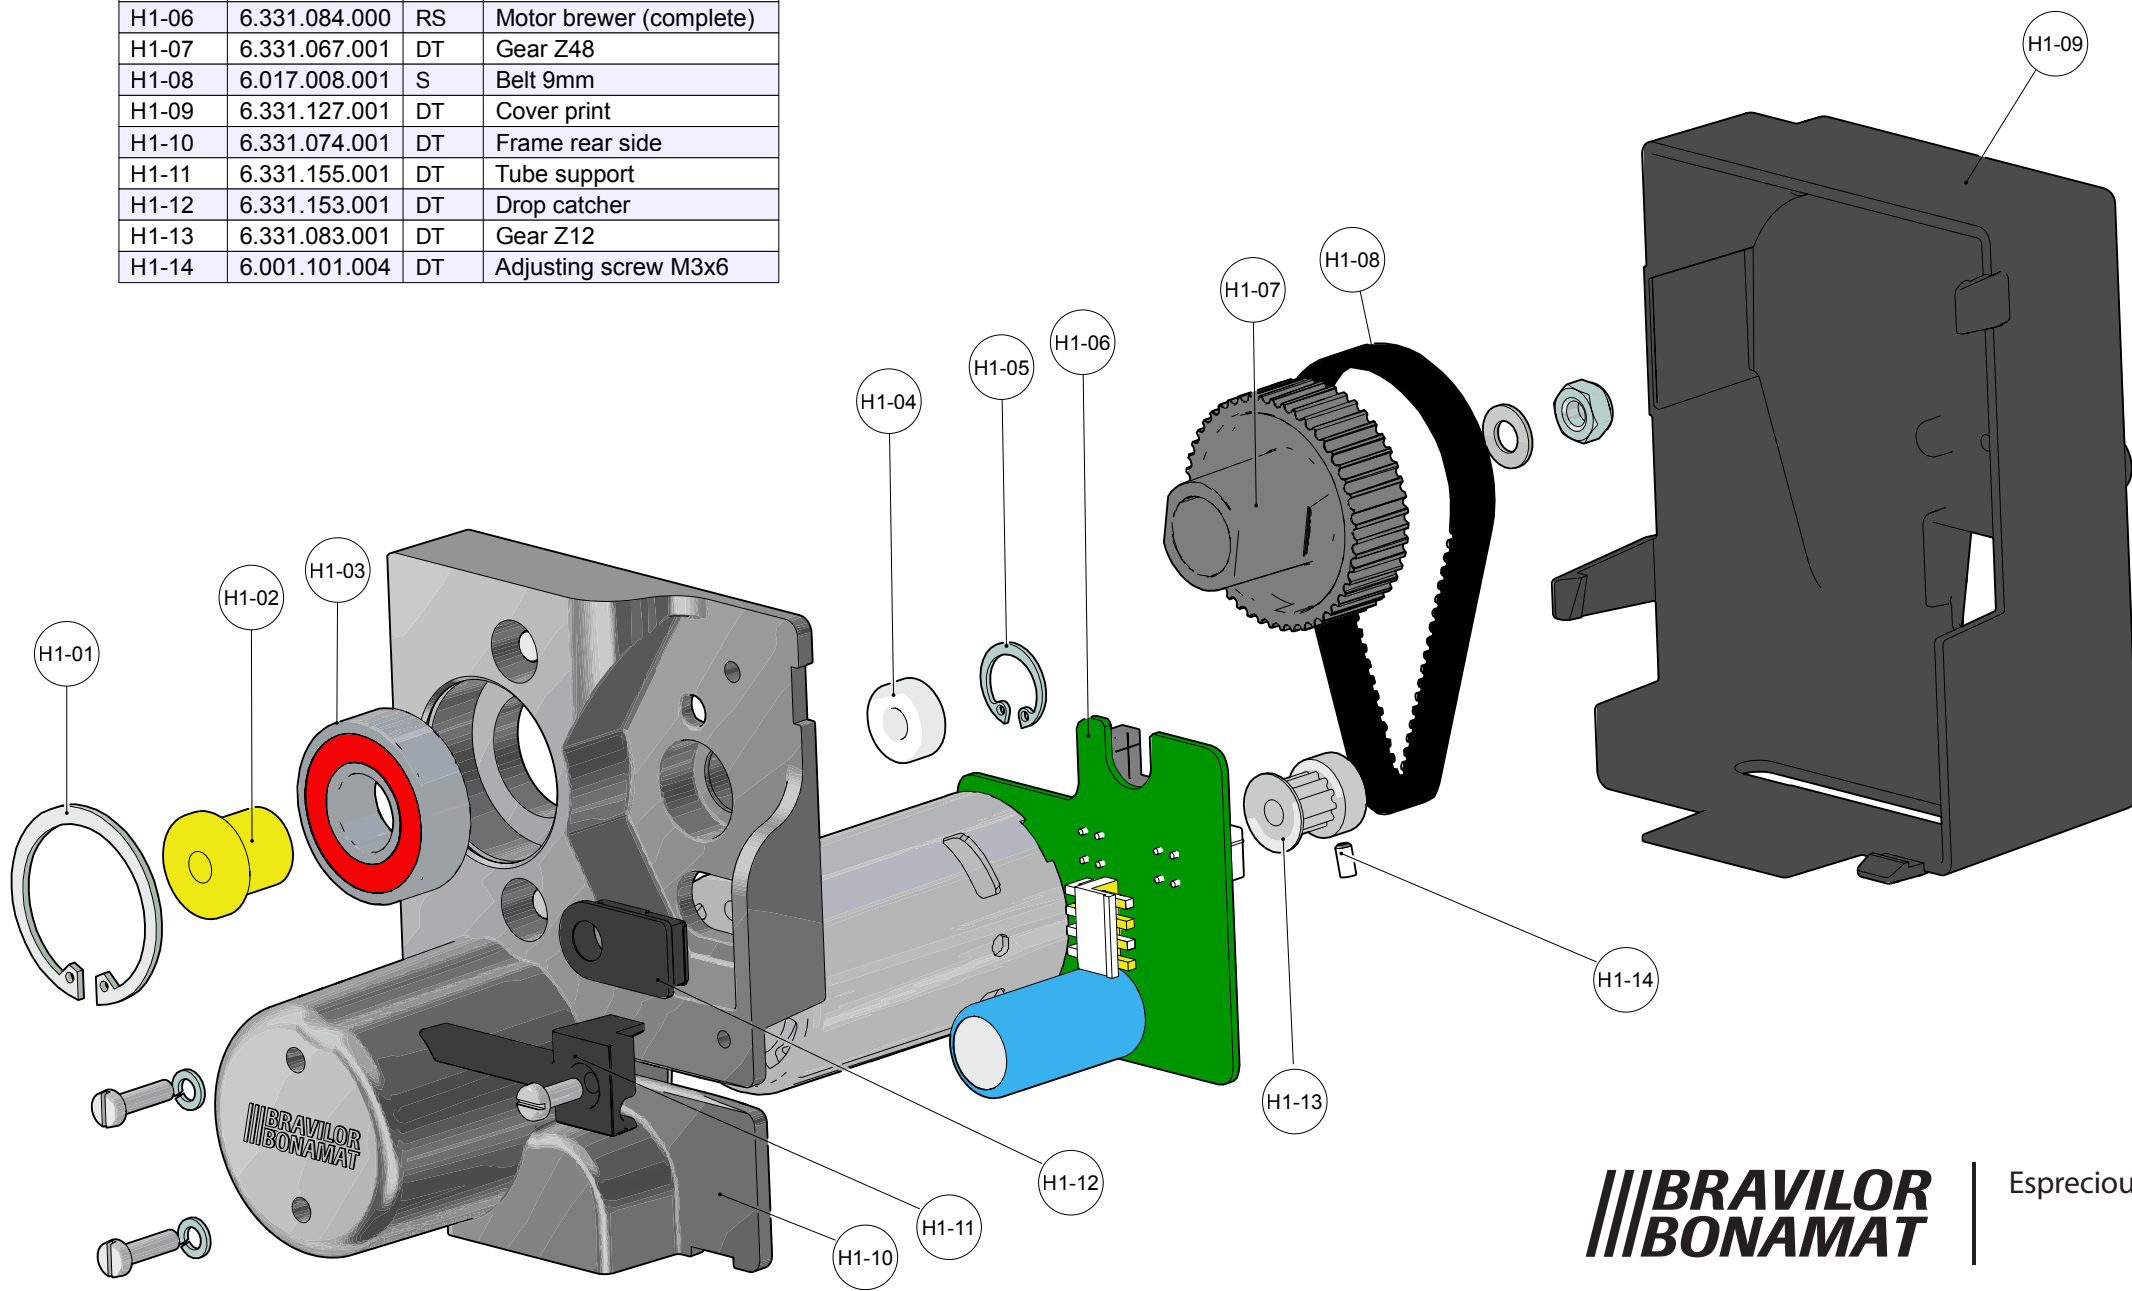


BOM ID	Description	S-RS	English
H2-01	6.331.077.001	RS	Clamp
H2-02	6.331.078.001	RS	Brewer housing
H2-03	6.331.085.100	RS	Brewer heating complete
H2-04	6.013.004.052	RS	Sieve micro filter
H2-05	6.331.079.001	RS	Bar
H2-06	6.331.065.001	RS	Bottom sieve
H2-07	6.011.001.169	S	O-ring D37,69x3,53 EPDM70
H2-08	6.011.031.004	DT	Gasket D17xD12x2
H2-09	6.331.072.001	DT	Axe guiding piece
H2-10	6.331.075.000	DT	Guiding piece (complete)
H2-11	6.331.069.001	DT	Nut TR12X2
H2-12	6.013.001.211	S	Coupling D=4 G=M5

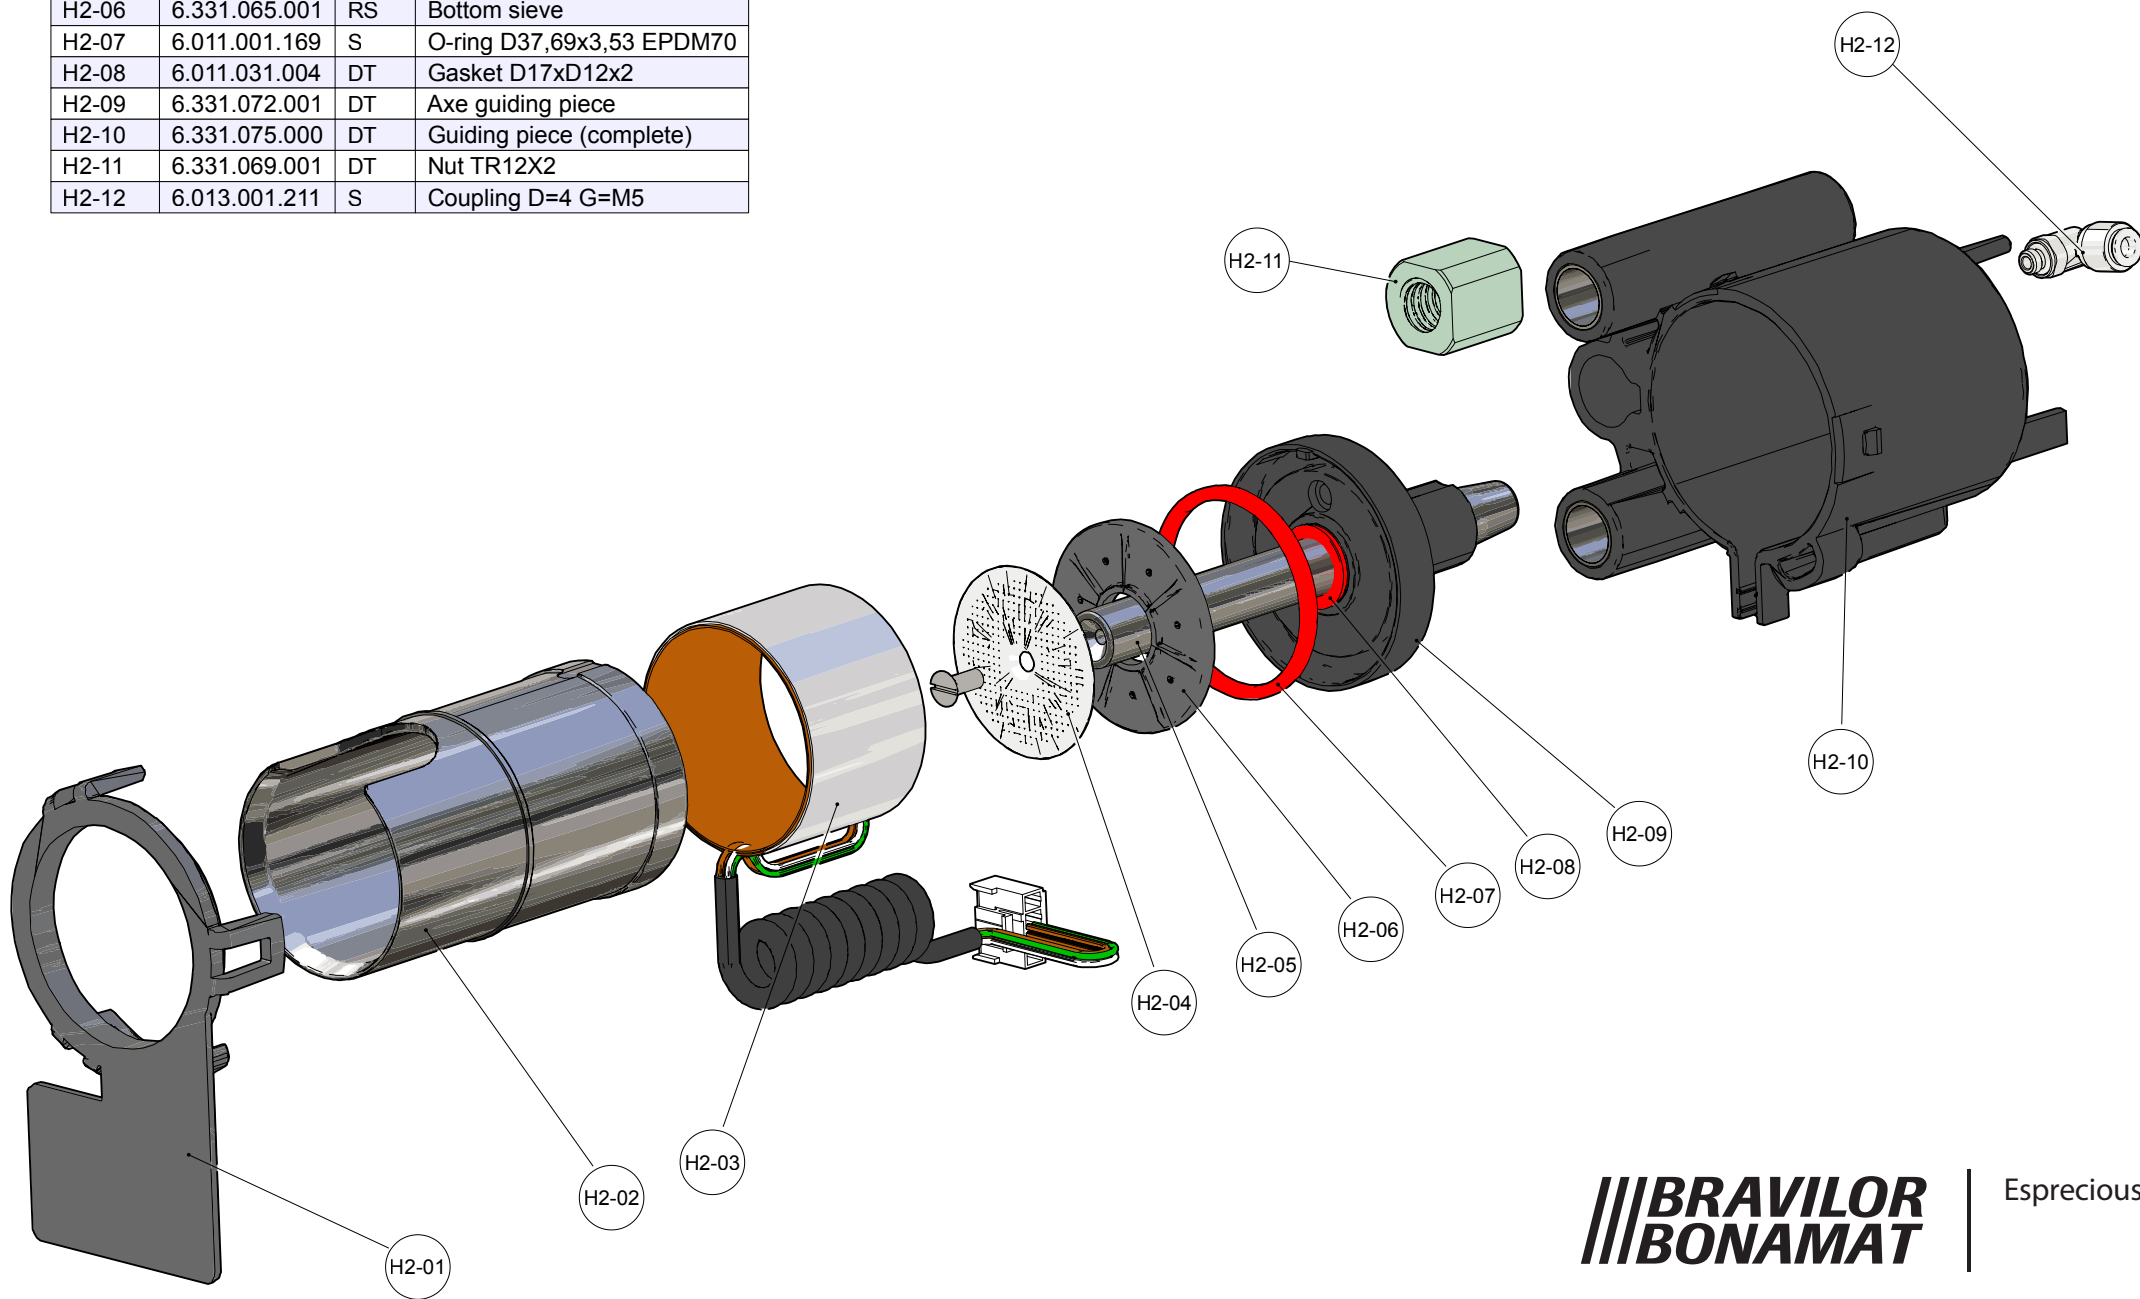


BOM ID	Description	S-RS	English
H3-01	6.331.003.001	DT	Guide plate
H3-02	6.331.073.001	DT	Frame front
H3-03	6.331.066.001	S	Discharge tube
H3-04	6.331.123.001	DT	Nut
H3-05	6.011.001.110	RS	O-ring 6.1x1.6
H3-06	6.331.097.001	DT	Spring washer
H3-07	6.331.070.001	RS	Outlet
H3-08	6.011.001.170	S	O-ring D32,92x3,53 SIL70
H3-09	6.013.004.053	RS	Sieve micro filter (flat)
H3-10	6.331.081.001	DT	Axe
H3-11	6.331.080.000	DT	Axe TR12x2

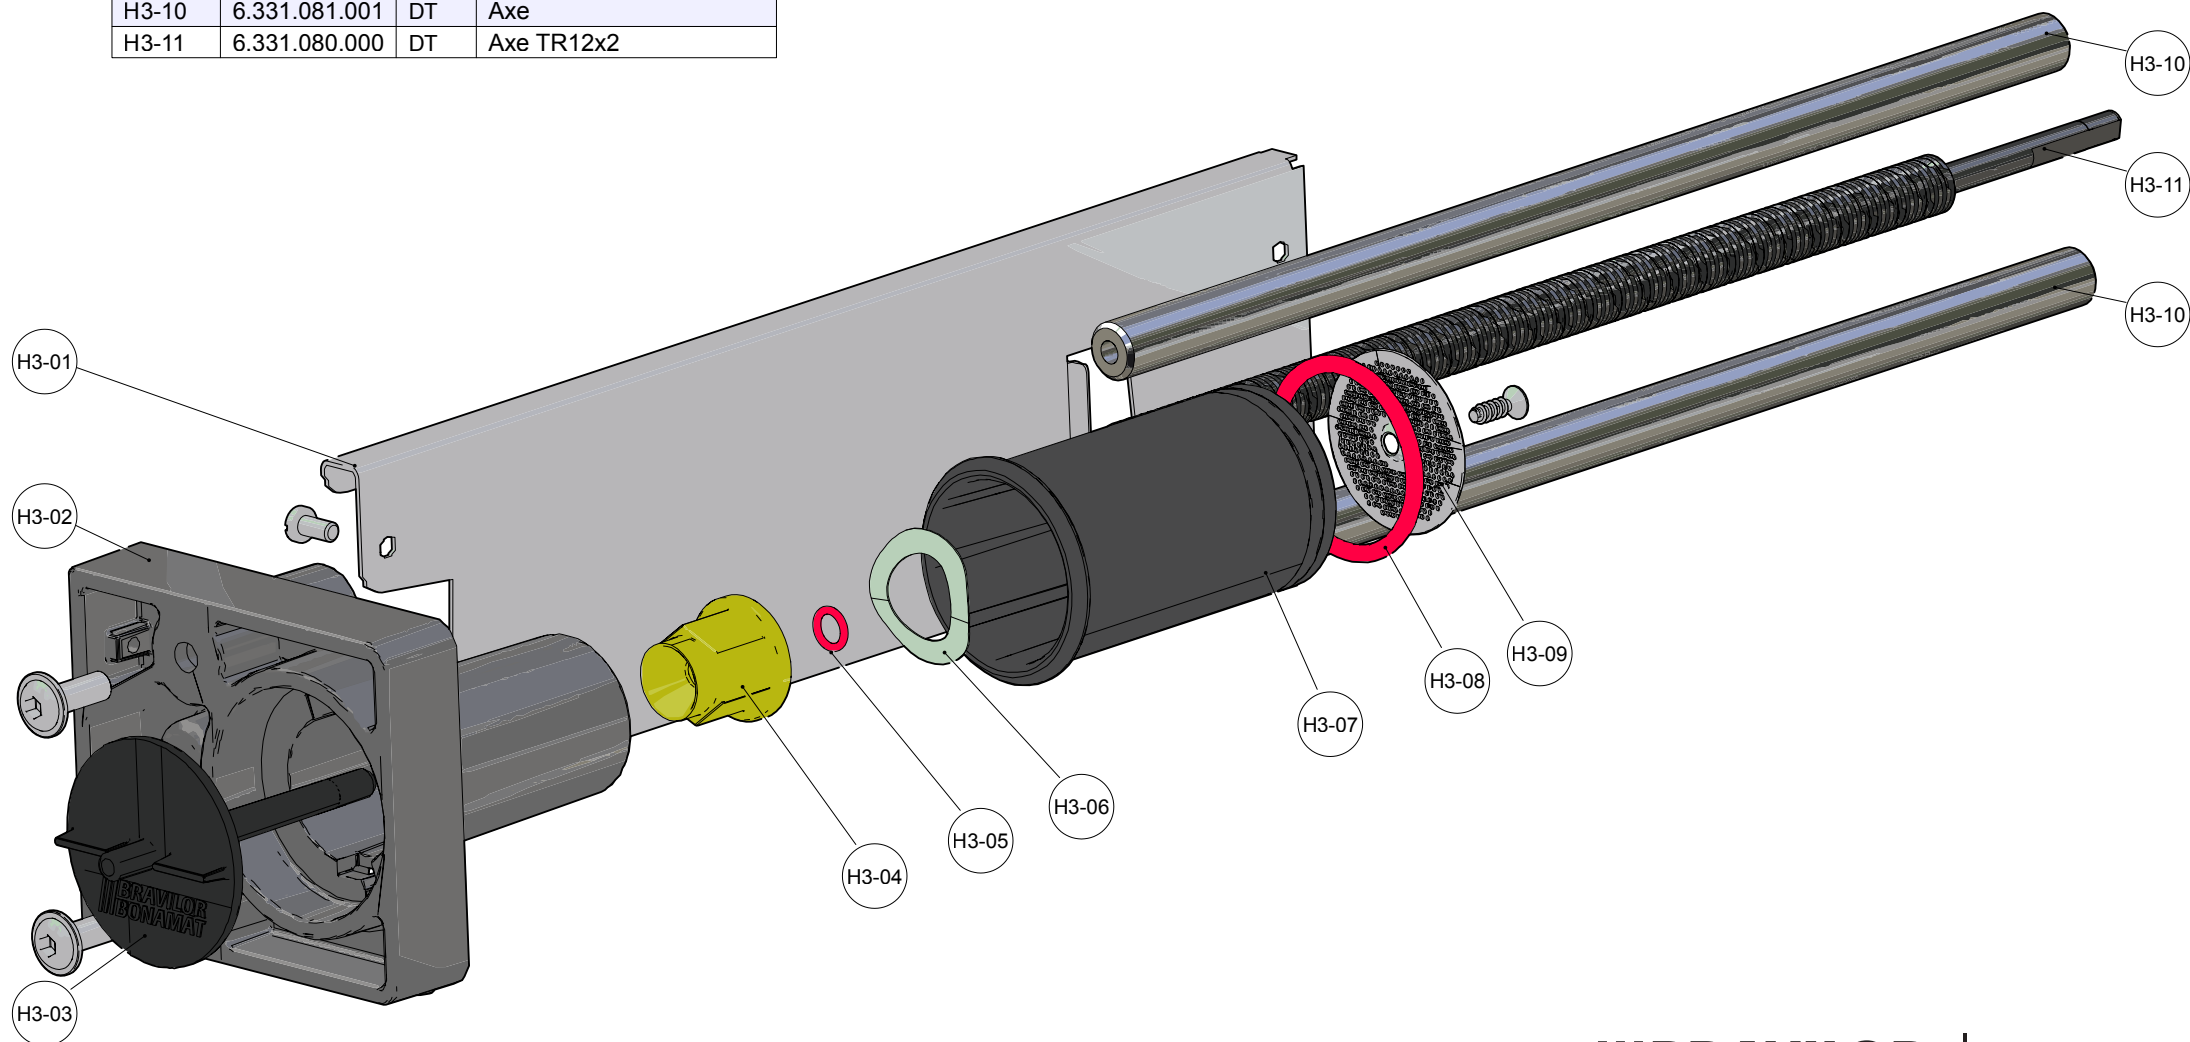


BOM ID	Description	S-RS	English
E-01	6.331.027.001	S	Outletcover
E-02	6.331.283.001	S	Clip beverages outlet
E-03	6.331.284.001	S	Arm beverages outlet
E-04	6.331.286.001	S	Lid
E-05	6.331.285.001	S	Outlet piece dual
E-06	6.331.062.001	S	Cylinder holder
E-07	6.331.076.001	S	Ring
E-08	6.331.061.001	S	Pressure unit
E-09	6.001.012.101	S	Spring washer
E-10	6.331.028.001	S	Holder outlet
E-11	6.331.024.000	S	Discharge outlet
E-12	6.331.023.001	S	Nut M16 X 1

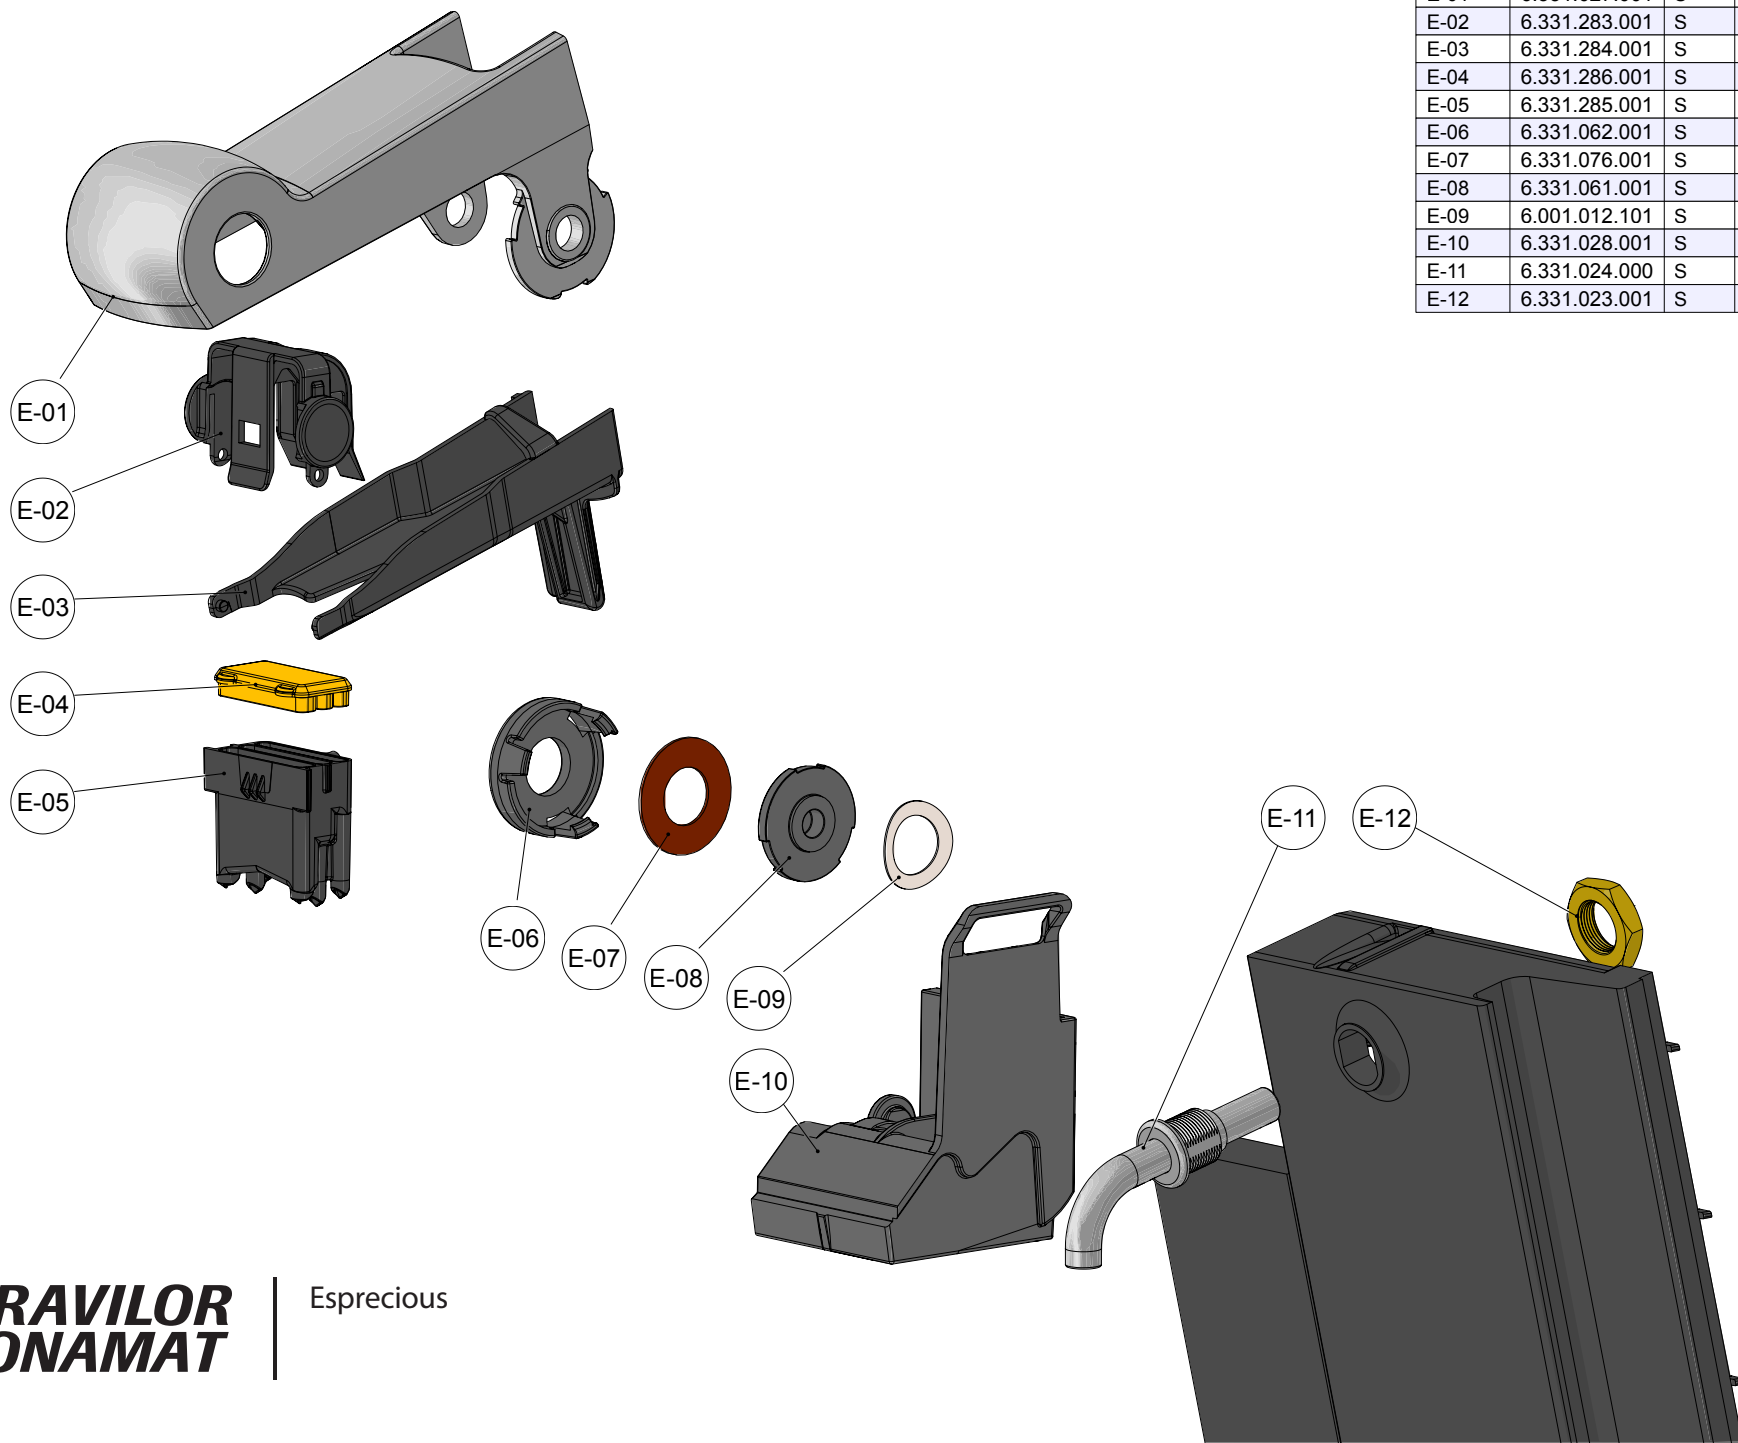

BOM ID	Description	S-RS	English
G-01	6.000.331.003	S	Bean canister (single)
G-02	6.000.331.004	S	Bean canister (dual)
G-03	6.331.055.001	S	Coffee chute (dual)
G-04	6.331.090.001	S	Coffee chute (single)
G-05	6.030.079.104	DT	Flapper
G-06	6.030.079.105	RS	Grinding discs ceramic
G-07	6.030.079.110	DT	Rotating burr carrier
G-08	6.030.079.106	S	V-string + drive shaft
G-09	6.030.079.107	RS	Motor + gear grinder
G-10	6.001.152.008	S	Vibration damper
G-11	6.331.091.001	DT	Coffee chute extention
G-12	6.030.079.007	RS	Sensor

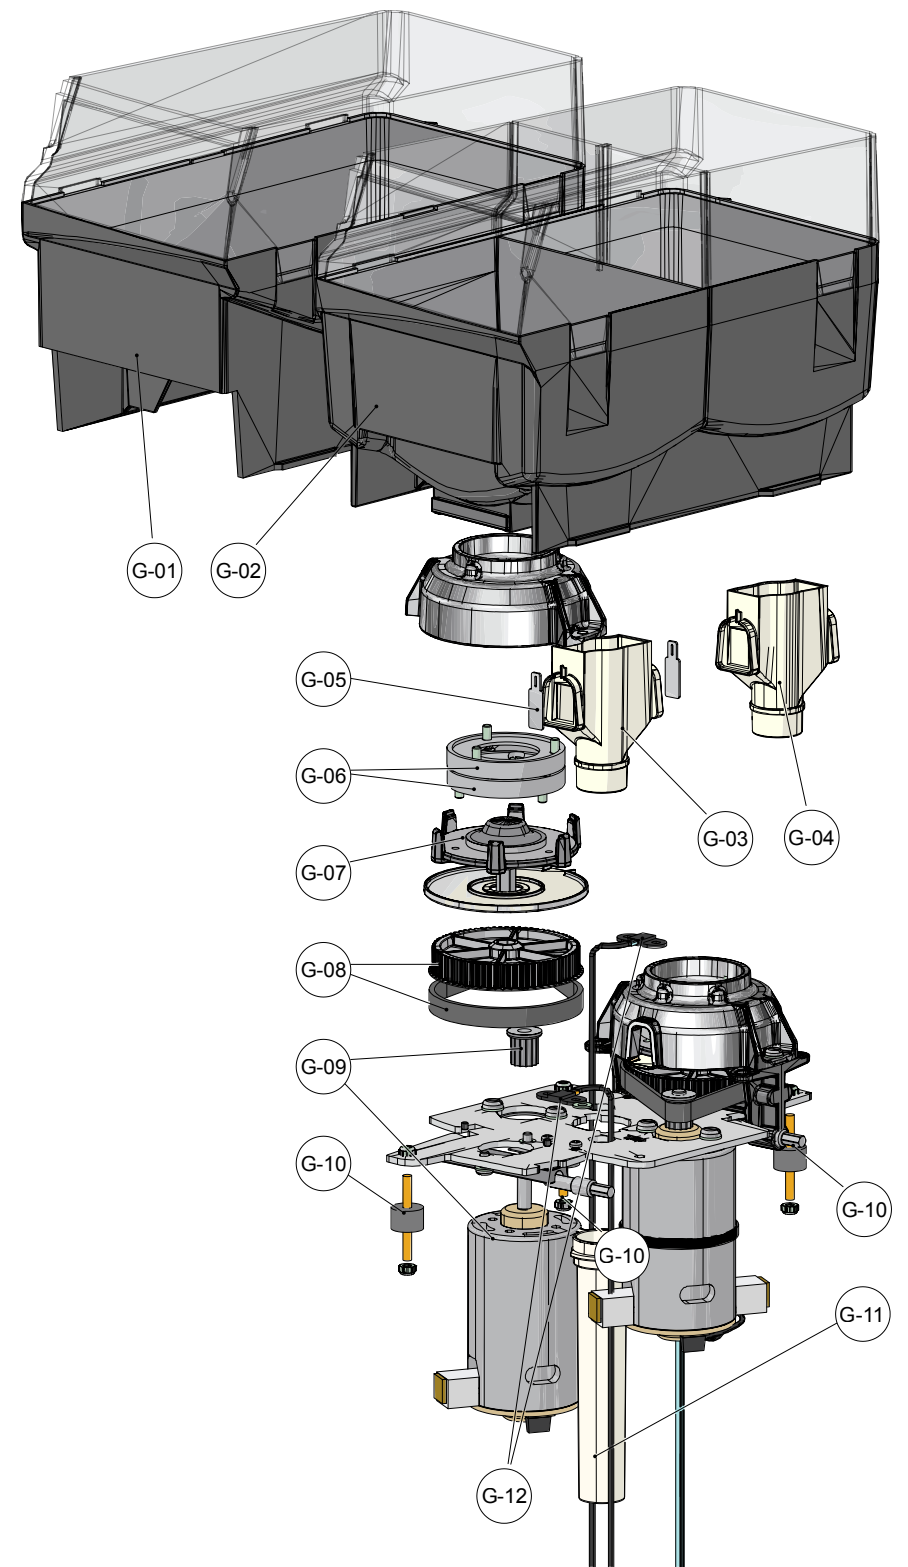

BOM ID	Description	S-RS	English
A-01	6.000.331.043	RS	Service panel
A-02	6.331.107.000	S	Speaker
A-03	6.402.002.001	S	Push button grey

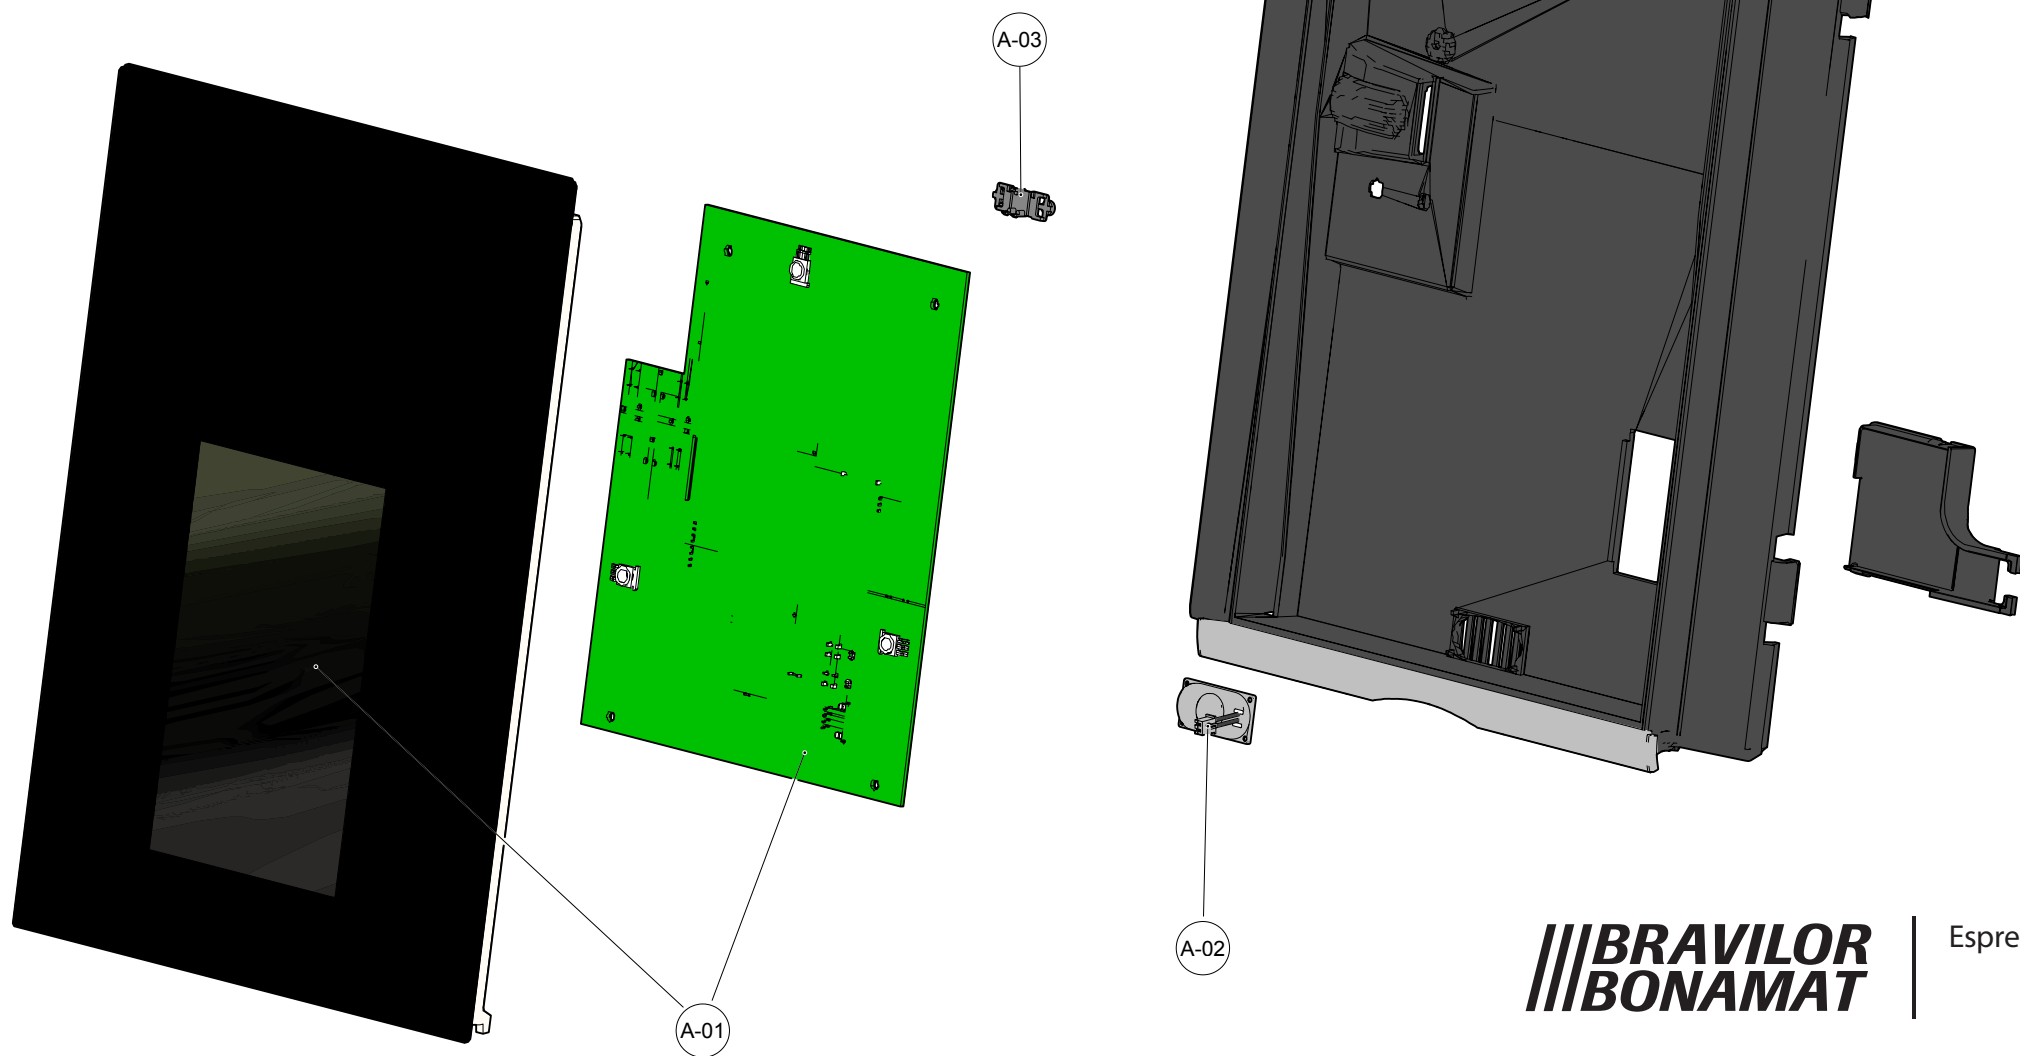


**BRIVILOR
BONAMAT**

Esprecious


BOM ID	Description	S-RS	English
B-01	6.331.019.001	S	Hinge
B-02	6.331.020.001	S	Hinge
B-03	6.329.253.001	S	Cord inlet
B-04	6.000.205.111	S	Connection hose
B-05	6.331.122.001	S	Key
B-06	6.331.015.001	S	Foot
B-07	6.001.152.008	S	Vibration damper
B-08	6.331.035.001	S	Hinge
B-09	6.231.194.001	S	Rotor fan
B-10	6.331.099.001	S	Grid fan
B-11	6.231.204.001	S	Vibration damper
B-12	6.331.136.001	S	Fan housing
B-13	6.019.033.017	S	Silicone tube 18 x 3
B-14	6.006.002.011	S	Inlet bush 28.2 mm
B-15	6.331.014.000	S	Drip-tray
B-16	6.229.116.001	S	Float drip-tray
B-17	6.331.344.001	S	Grid for drip-tray
B-18	6.331.271.001	DT	Front panel litterbin
B-19	6.331.049.001	S	Litterbin
B-20	6.331.411.000	DT	Front panel
B-21	6.014.004.064	S	Lock incl. key
B-22a	6.331.046.000	S	Lid (dual)
B-22b	6.331.093.000	S	Lid (single)
B-23	6.331.047.001	S	Cap

BRAVILOR
BONAMAT

Esprecious

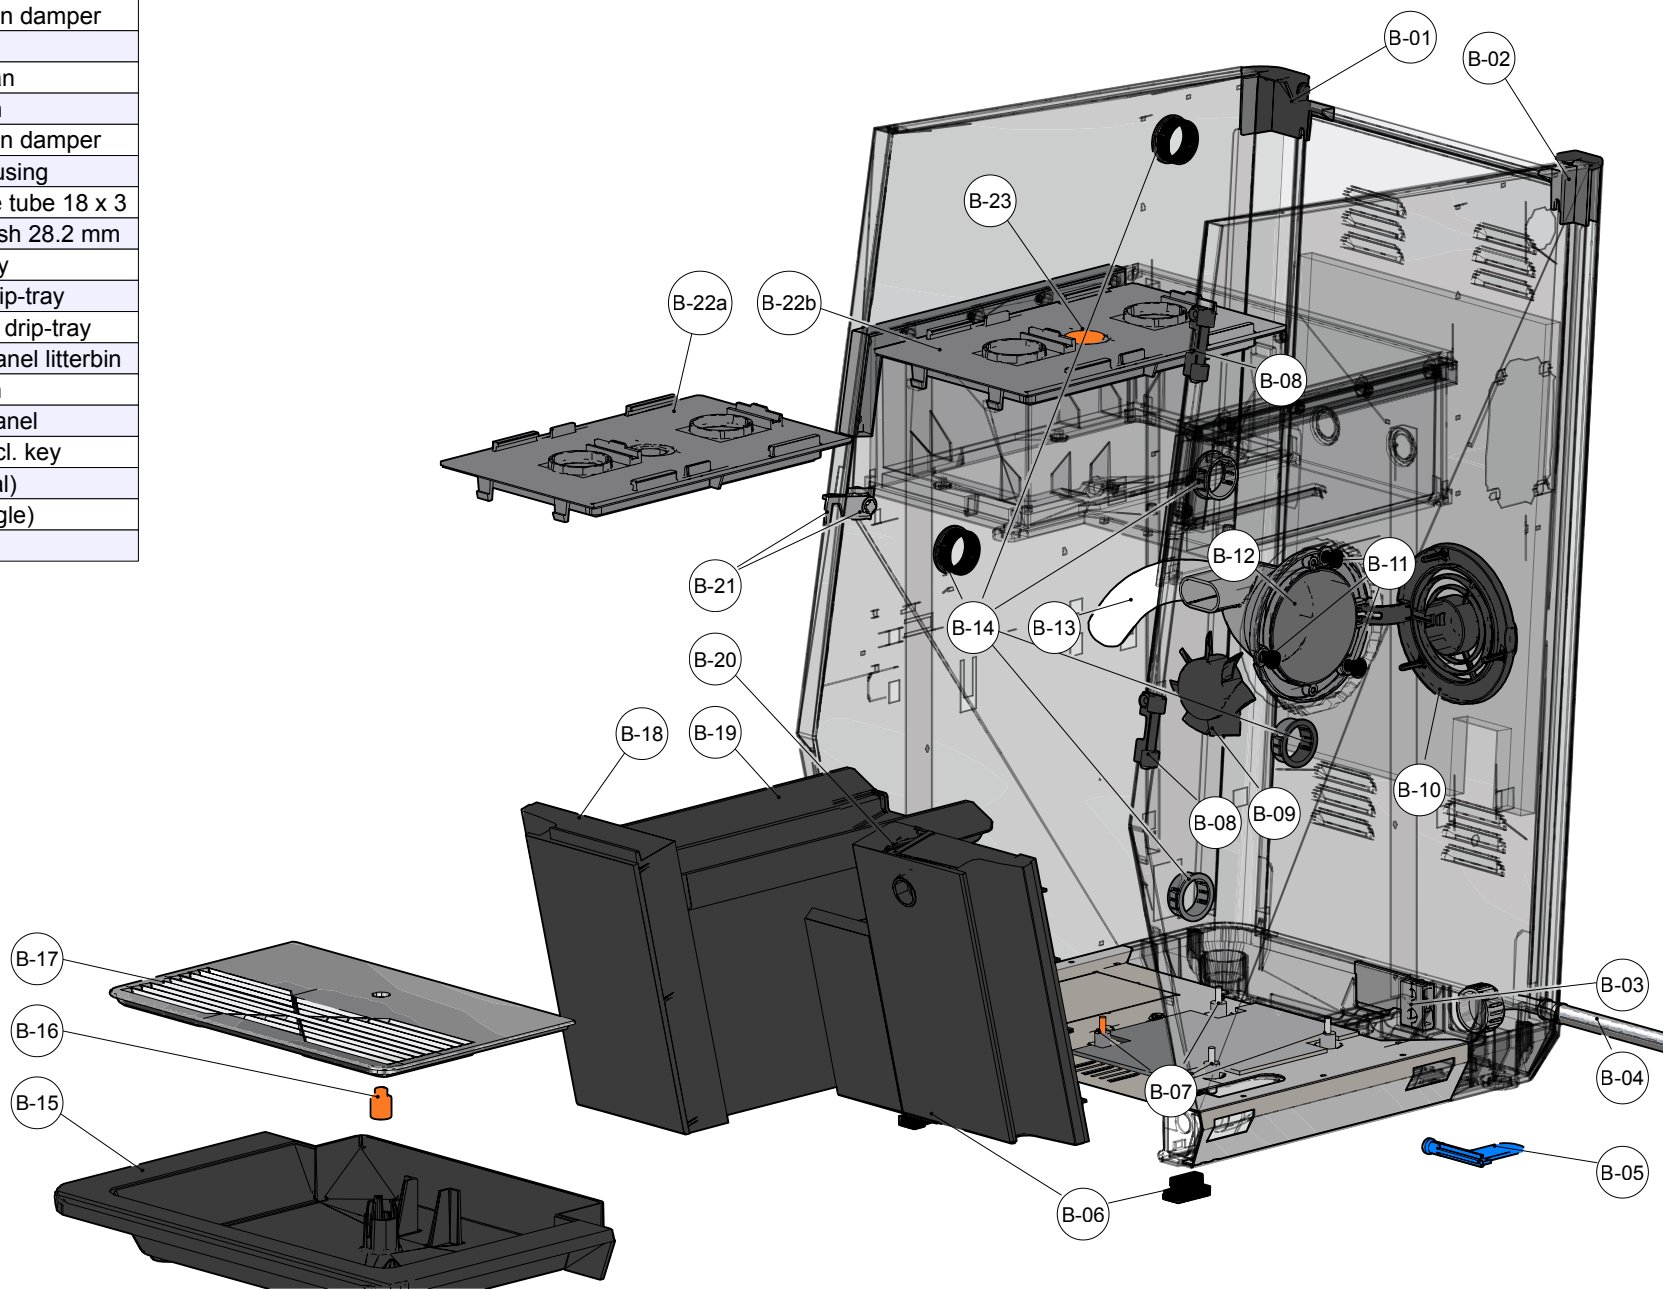



BOM ID	Description	S-RS	English
F-01	6.331.058.100	S	Switch
F-02	6.004.001.089	RS	Switch
F-03	6.331.125.001	S	Spring
F-04	6.331.058.200	S	Switch
F-05	6.331.137.000	RS	Trafo
F-06	6.331.059.000	RS	Mainboard
F-07	6.000.229.146	S	Motor fan
F-08	6.003.012.176	S	Connection cord (STD)
F-09	6.003.012.118	S	Connection cord (GB)

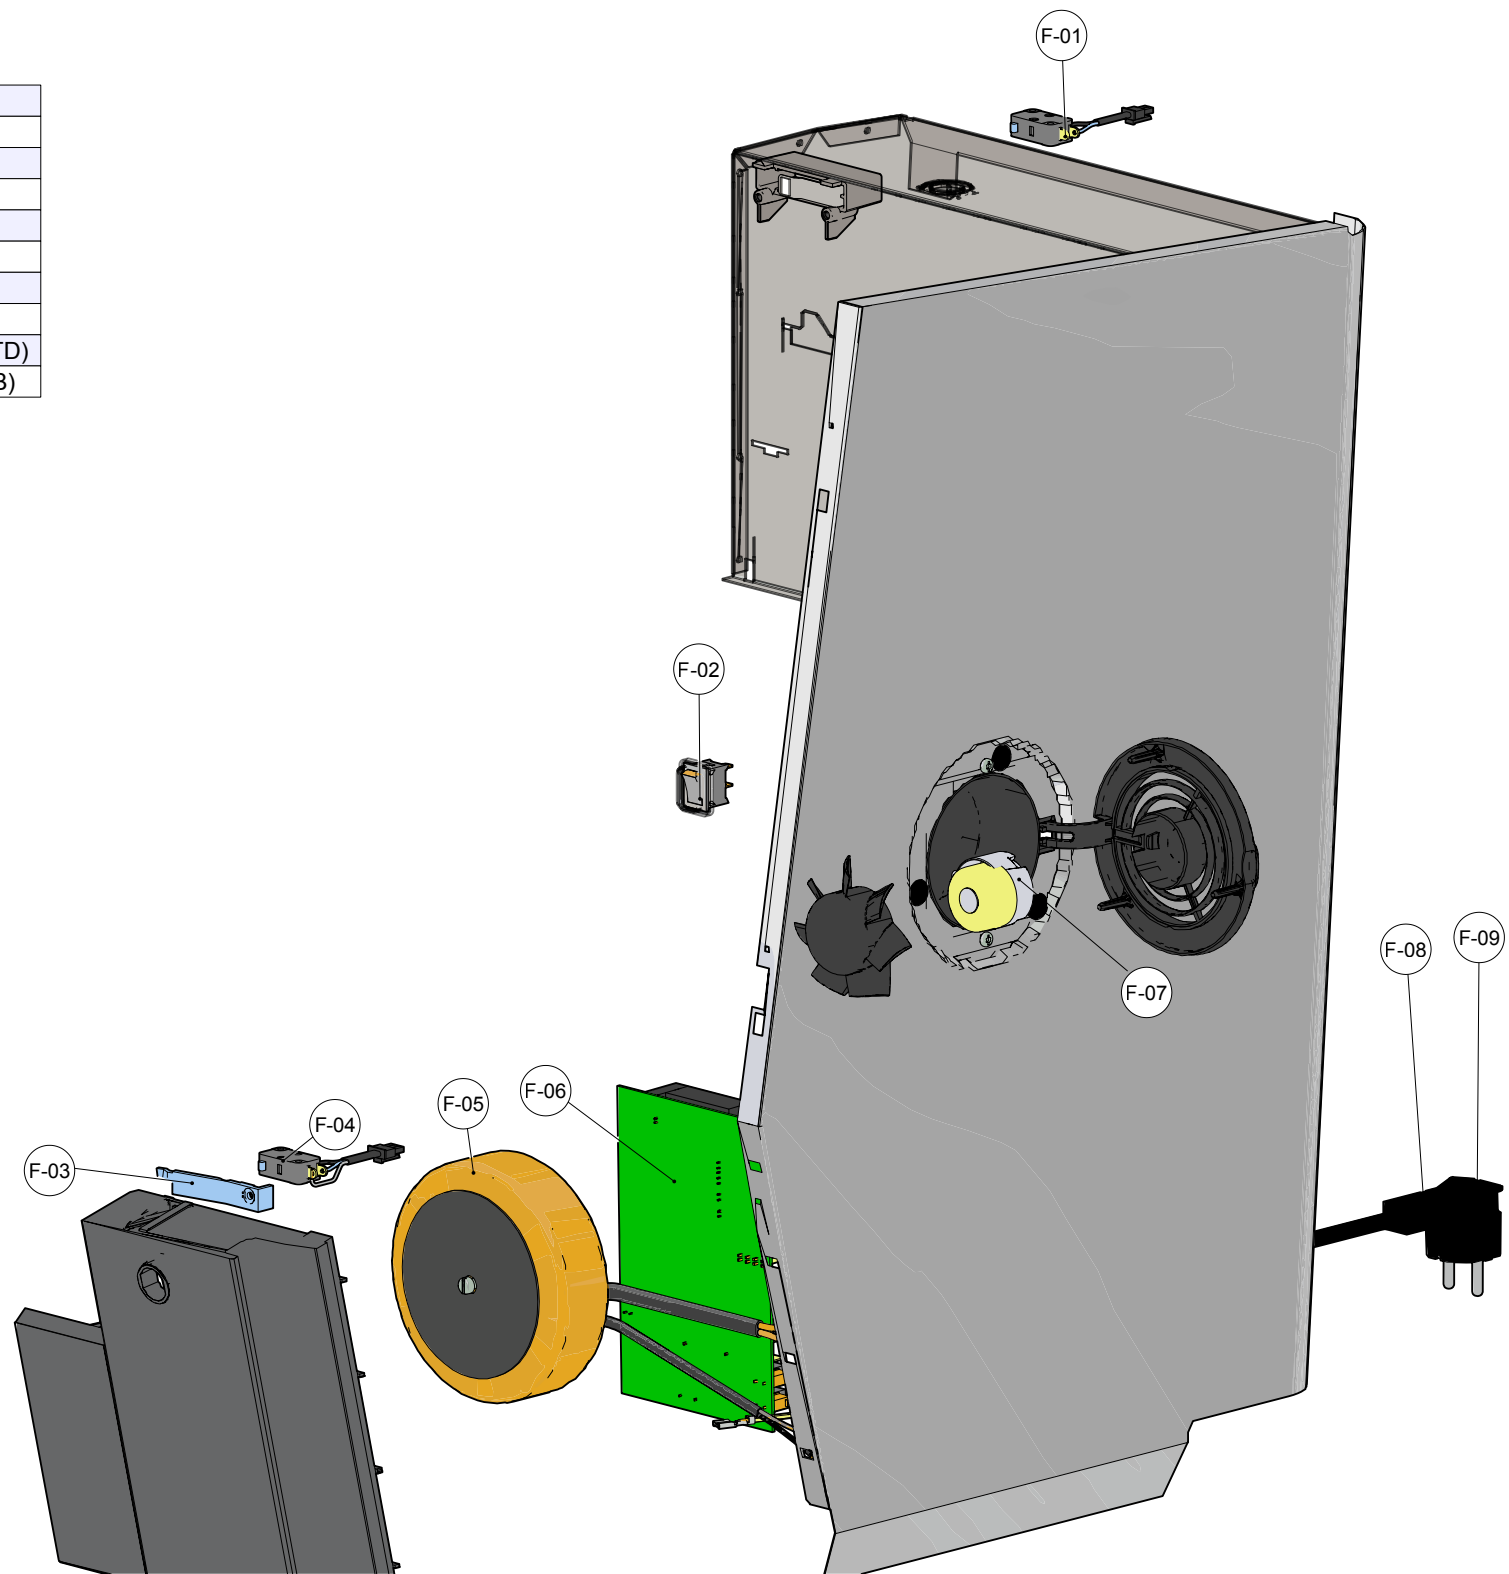

BOM ID	Description	S-RS	English
C-01	6.000.229.110	S	Canister 134 mm - 90 mm
C-02	6.000.229.106	S	Canister 65mm with spring
C-03	6.229.274.001	S	Lid 134mm
C-04	6.229.273.001	S	Lid 65mm
C-05	6.000.229.102	S	Drive shaft assy
C-06	6.000.229.122	S	Set of canister spare parts
C-07	6.229.932.000	S	Outlet canister compl left
C-08	6.229.931.000	S	Outlet canister compl (centr)
C-09	6.229.594.001	S	Positioning wheel
C-10	6.030.070.037	S	Canister motor
C-11	6.030.074.006	S	Drive shaft

**BRIVILOR
BONAMAT**


Esprecious

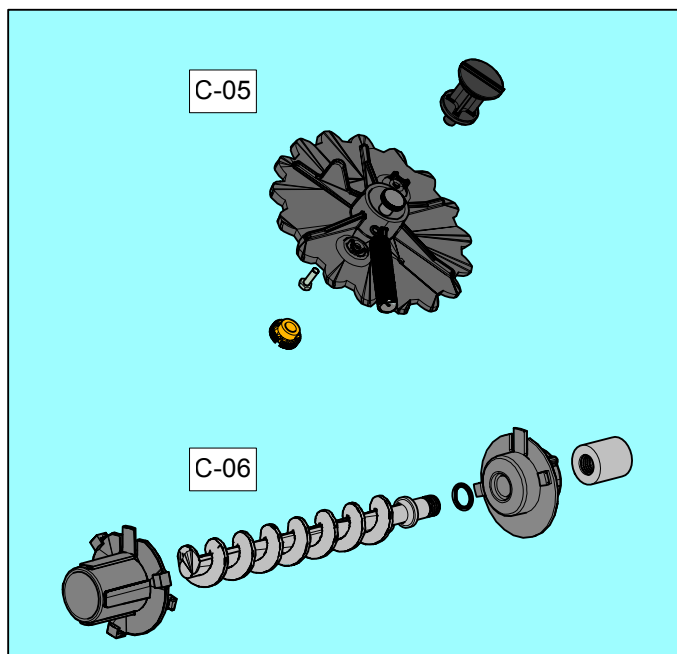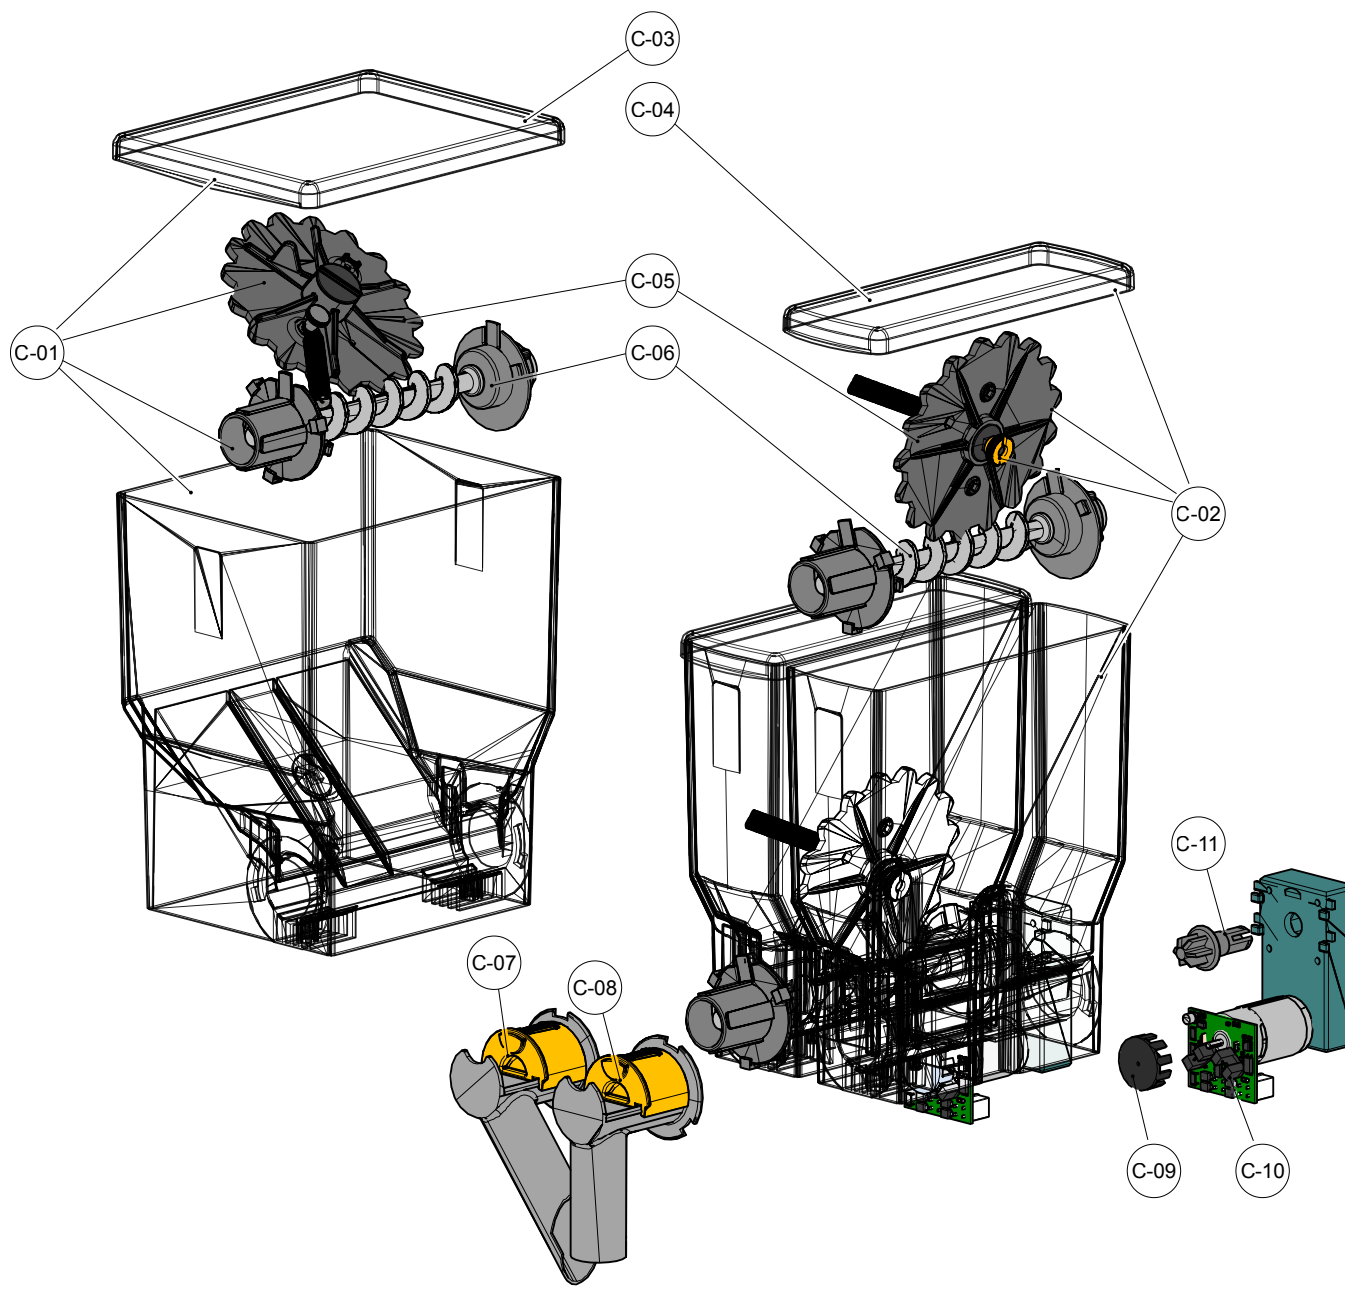


BOM ID	Description	S-RS	English
D-01	6.331.237.000	RS	Mixer motor incl. print
D-02	6.000.229.207	RS	Mixer motor complete
D-03	6.229.808.001	S	Condense reservoir
D-04	6.229.805.001	S	Mixing chamber
D-05	6.229.809.001	S	Fastening ring
D-06	6.229.803.001	S	Whipper disk
D-07	6.229.806.001	S	Rubber seal mixer
D-08	6.030.071.020	S	Rubber seal mixer
D-09	6.229.807.001	S	Holder rubber seal
D-10	6.229.810.001	S	Plate mixer moter
D-11	6.011.001.094	S	O-ring 13x2
D-12	6.011.001.073	S	O-ring 6x1.5
D-13	6.229.580.001	S	Water inlet 6mm
D-14	6.331.276.002	S	Nipple mixing chamber

BRAVILOR
BONAMAT


Esprecious

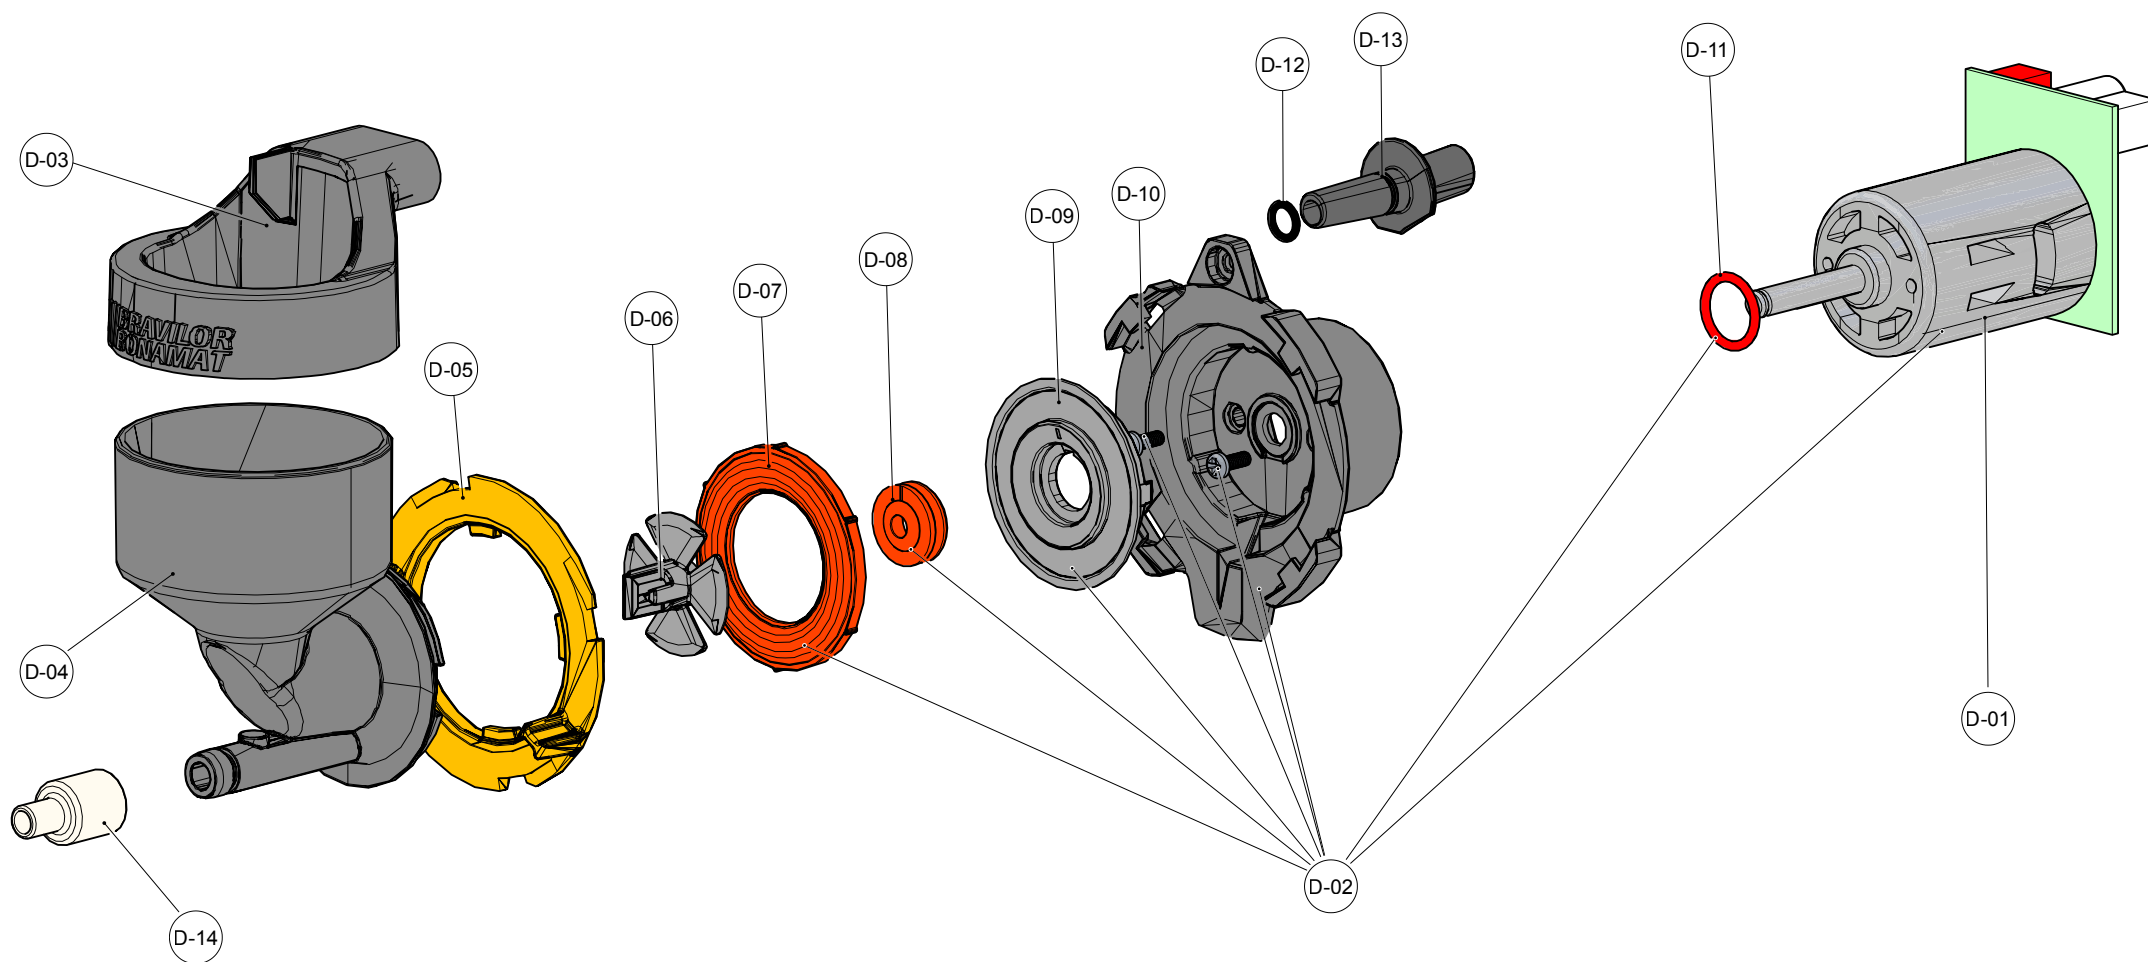


BOM ID	Description	S-RS	English
I-01	6.000.229.198	RS	Motor float tank (assy)
I-02	6.229.594.001	S	Positioning wheel
I-03	6.229.615.000	S	Pump motor
I-04	6.229.427.001	S	Seal motor
I-05	6.229.334.001	S	Lid pumpfloat tank
I-06	6.229.344.001	S	Rotor pumpfloat tank
I-07	6.229.891.001	S	Float tank
I-08	6.229.335.001	S	Pumpfloat tank

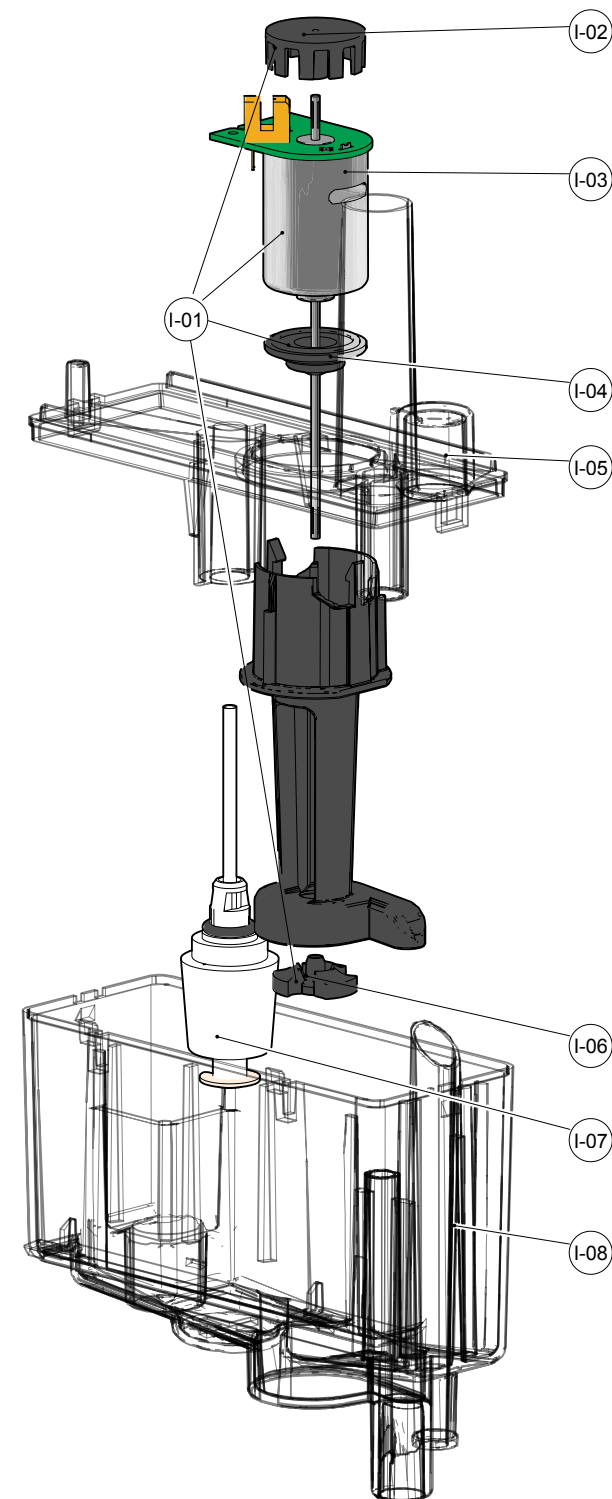


BOM ID	Description	S-RS	English
J-01	6.231.121.001	S	Lid water selector
J-02	6.004.026.001	RS	Light sensor
J-03	6.000.231.022	RS	Motor water selector (assy)
J-04	6.231.120.001	RS	Water rotation disk
J-05	6.229.761.001	S	Water sealing ring
J-06	6.231.825.001	S	Outlets (2) water selector
J-07	6.231.259.001	S	Drip-tray water selector

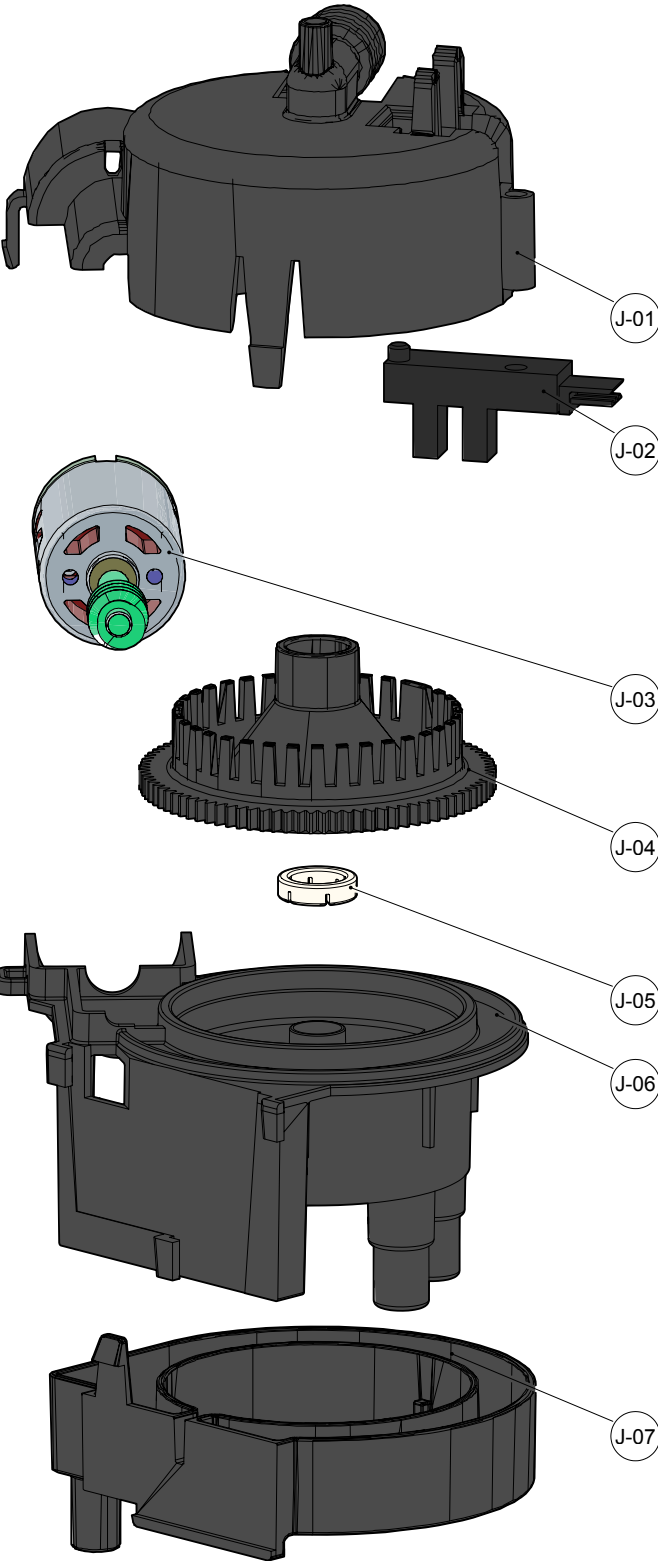

BOM ID	Description	S-RS	English
K-01	6.000.331.020	RS	Flow boiler
K-02	6.001.043.056	S	Tube clamp 25-150mm/9mm
K-03	6.265.146.000	RS	Temperature sensor
K-04	6.016.008.084	RS	Thermostat
K-05	6.231.191.001	S	Ring
K-06	6.231.132.001	S	Supply boiler
K-07	6.331.124.002	DT	Insulation
K-08	6.331.124.001	DT	Insulation

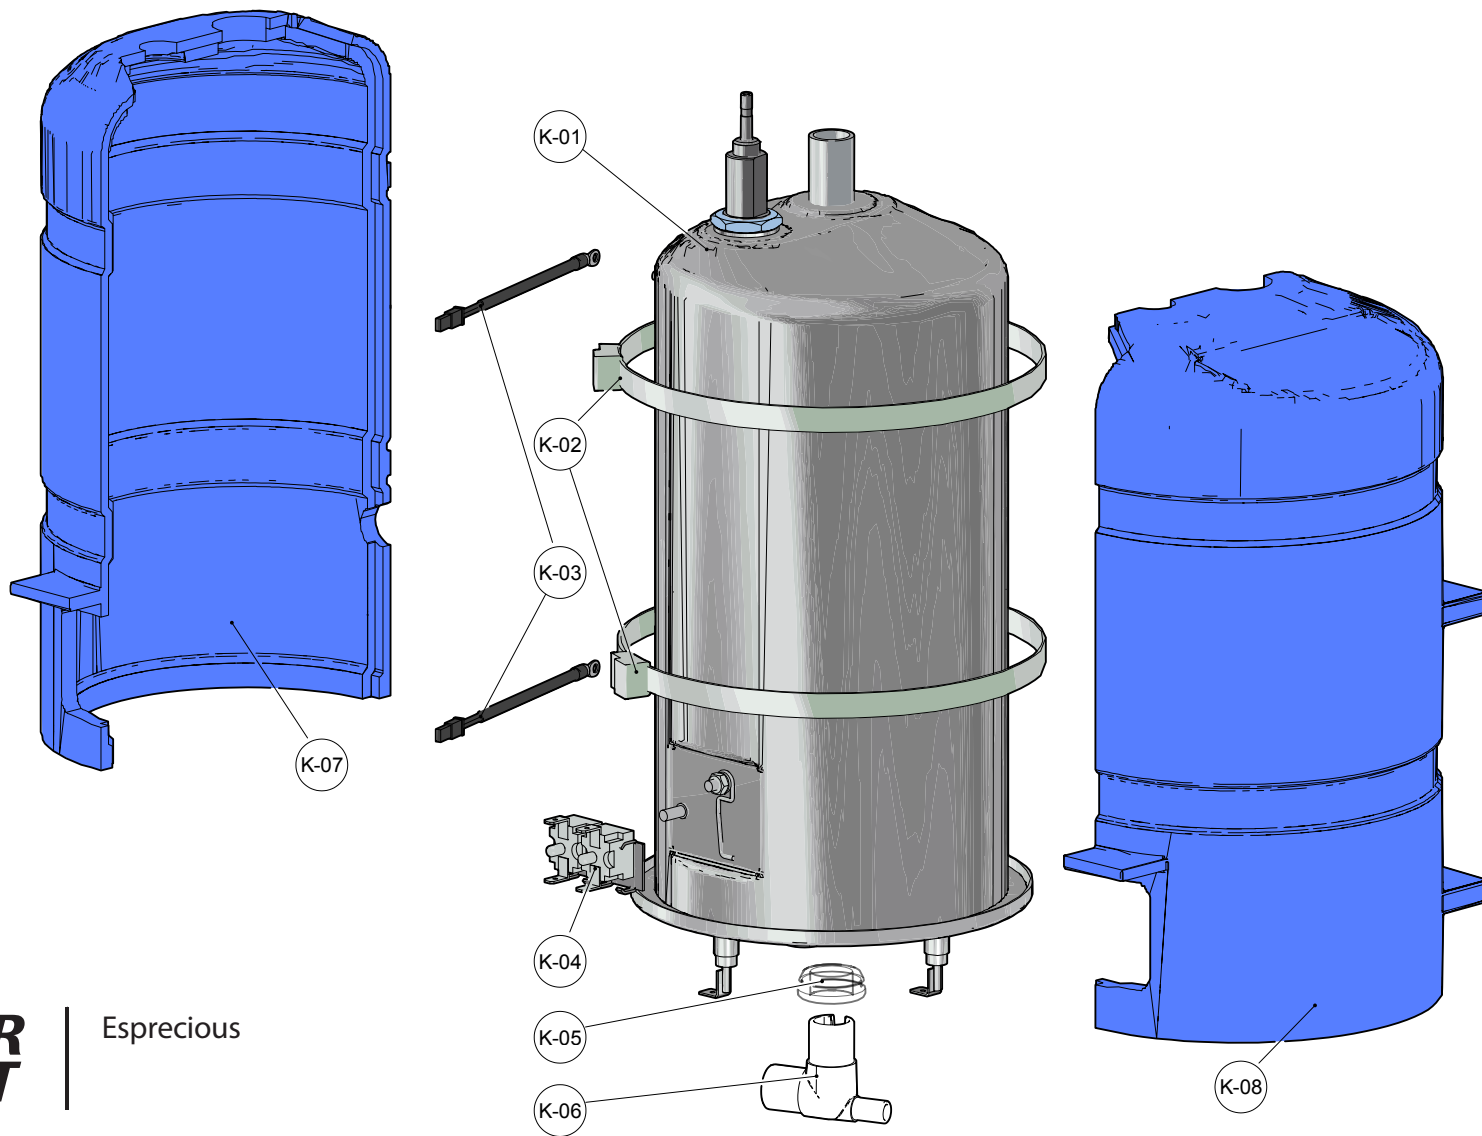

BOM ID	Description	S-RS	English
L-01	6.013.008.066	S	Tube support 12MMxR3/8"
L-02	6.023.004.038	RS	Pump head
L-03	6.023.004.031	RS	Pump 120W 220V
L-04	6.013.008.067	S	Nipple G3/8"BUxG1/8"BI
L-05	6.013.001.212	S	Knee 4MMxG1/8
L-06	6.019.072.002	S	Tube PTFE 2.0 x 1.0
L-07	6.013.001.216	S	Coupling 4xG1/4"
L-08	6.016.024.012	RS	Water counter
L-09	6.019.072.002	S	Tube PTFE 2.0 x 1.0
L-10	6.016.014.003	S	Manometer assy
L-11	6.019.072.002	S	Tube PTFE 2.0 x 1.0
L-12	6.013.001.212	S	Knee 4MMxG1/8
L-13	6.016.001.129	RS	Magnetic valve 24V DC NC
L-14	6.019.072.002	S	Tube PTFE 2.0 x 1.0
L-15	6.019.072.002	S	Tube PTFE 2.0 x 1.0
L-16	6.013.001.216	S	Coupling 4xG1/4"

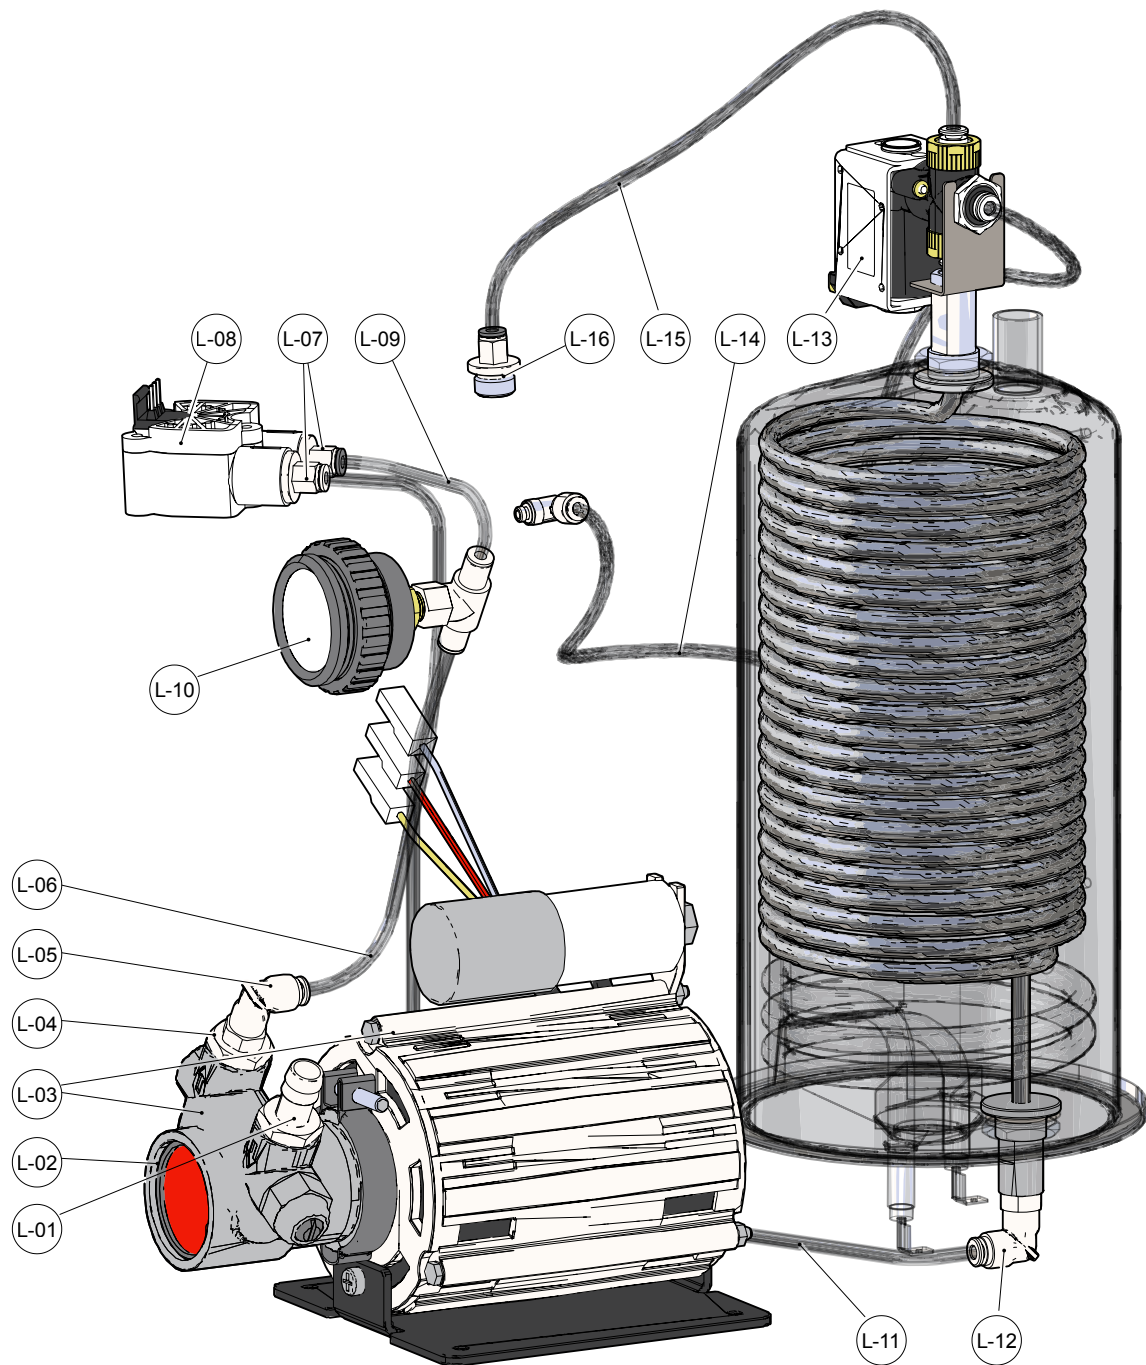

BOM ID	Description	S-RS	English
M-01	6.016.001.096	S	Magnetic valve 2 l/min.
M-02	6.001.079.003	S	Tube clamp 15.6 mm
M-03	6.019.033.014	S	Silicone tube 9.5 x 3.0
M-04	6.019.033.009	S	Silicone tube 7 x 4
M-05	6.019.033.013	S	Silicone tube 11,5 x 3.0
M-06	6.013.008.055	DT	T-piece
M-07	6.019.033.013	S	Silicone tube 11,5 x 3.0
M-08	6.019.033.013	S	Silicone tube 11,5 x 3.0
M-09	6.001.079.001	S	Tube clamp 12.7 mm
M-10	6.263.081.001	S	Tube boiler drain
M-11	6.006.002.018	S	Tightening plug 10.5 mm
M-12	6.019.033.013	S	Silicone tube 11,5 x 3.0
M-13	6.019.033.001	S	Silicone tube 2 x 6
M-14	6.331.140.001	S	Silicone tube
M-15	6.019.033.028	S	Silicone tube 3.5 x 2.2
M-16	6.019.033.008	S	Silicone tube 5 x 1.5
M-17	6.016.018.023	S	Sieve
M-18	6.402.010.001	S	Descale cover

